

Care and Maintenance Furniture

CARE INSTRUCTIONS

GENERAL

LIVING products should only be used indoors. Wood may deform in case of excessive temperature and humidity fluctuations. Avoid direct sun exposure. Over time some materials can naturally change color, particularly the sides exposed to direct sunlight. We also remind you that wooden surfaces cannot endure high temperatures such as direct contact with hot pots, pans, or other heated appliances.

CHARGING BOX & LAPTOP BOX

Do not use wet or damp cloths on the electrical equipment integrated into the furniture. Use a dry cloth instead and unplug the electrical equipment before start cleaning.

MAINTENANCE & CLEANING

METAL

Before using any cleaning product, test a small and inconspicuous area first. Clean the LIVING Structures periodically using a soft damp cloth and neutral detergent (use warm water preferentially). Dry immediately with a soft cloth. Do not use acid products, abrasives, solvents, scouring pads or steel wool. Avoid contact with fruit juices, colas, coffee, or salt, which can leave permanent marks if not removed immediately.

WOOD & DERIVATES

Before using any cleaning product, test a small and inconspicuous area first. Clean the LIVING Tops regularly, using a slightly damp soft cloth. In case of stubborn dirt, avoid rubbing the surface. Add a mild detergent to the damp cloth and dry immediately with another soft cloth. Do not use acid products, abrasives, solvents, scouring pads or steel wool. To avoid stains and other damages, liquids should be immediately wiped. We do not recommend the use of polishing or waxing products.

BUREL

Burel is a low-maintenance fabric. The fiber structure repels dirt and allows rapid cleaning and drying after any spillage. However, we recommend that any dirt or spilled liquid to be cleaned immediately.

Please read our [Terms & Conditions](#) for more information.

